



INSTRUCTION
BEARINGS DISASSEMBLY
NOVATEC D662SB, D882SB, D992SB, D362SB, DH12SB, DH82SB

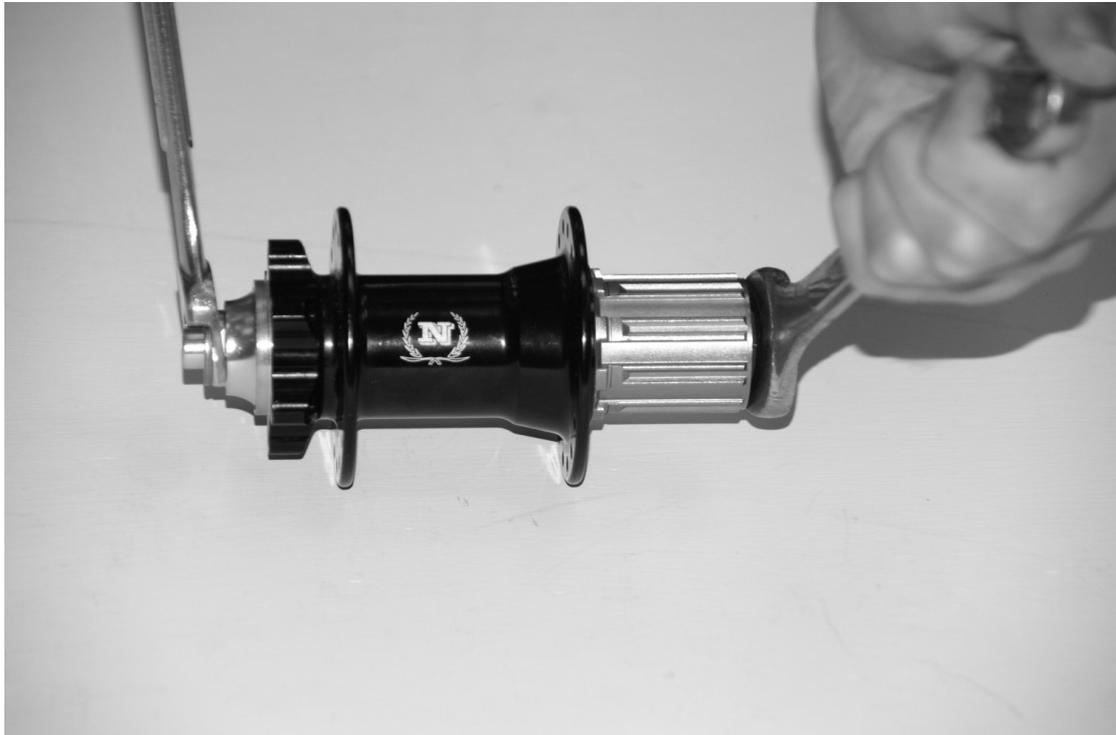

1. Insert two wrench into both side caps and unscrew the side cap.

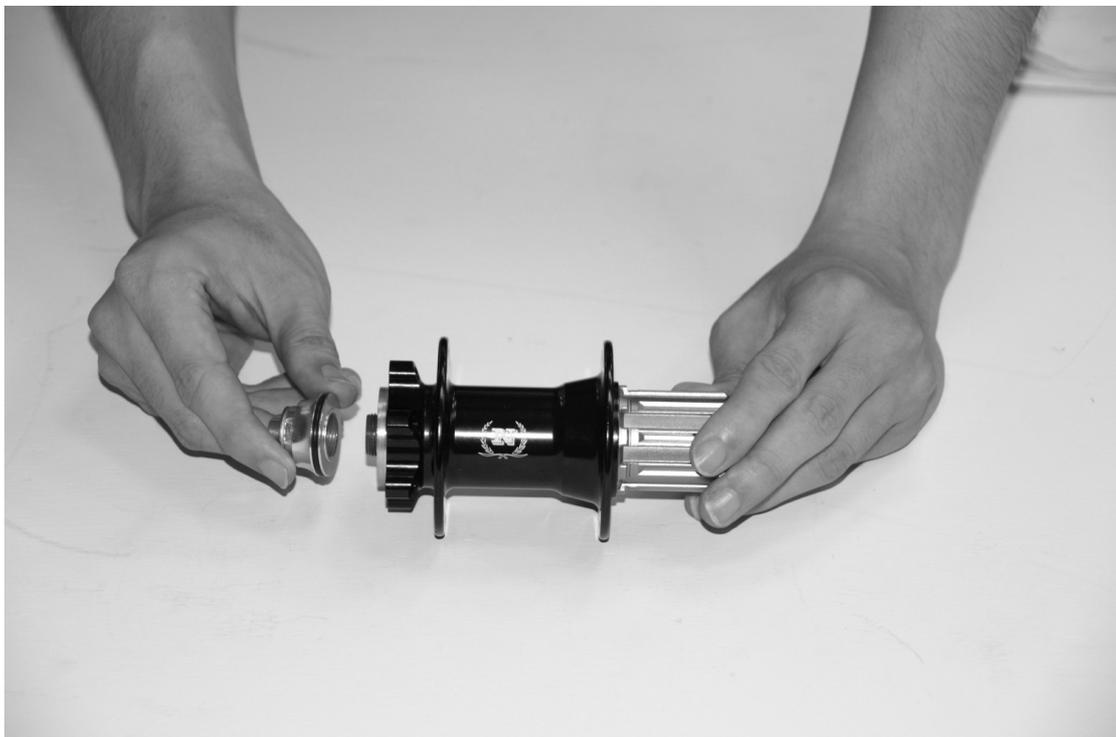


2. Take off the left side cap.



3. Take out the axle.



4. Take out the cassette body.

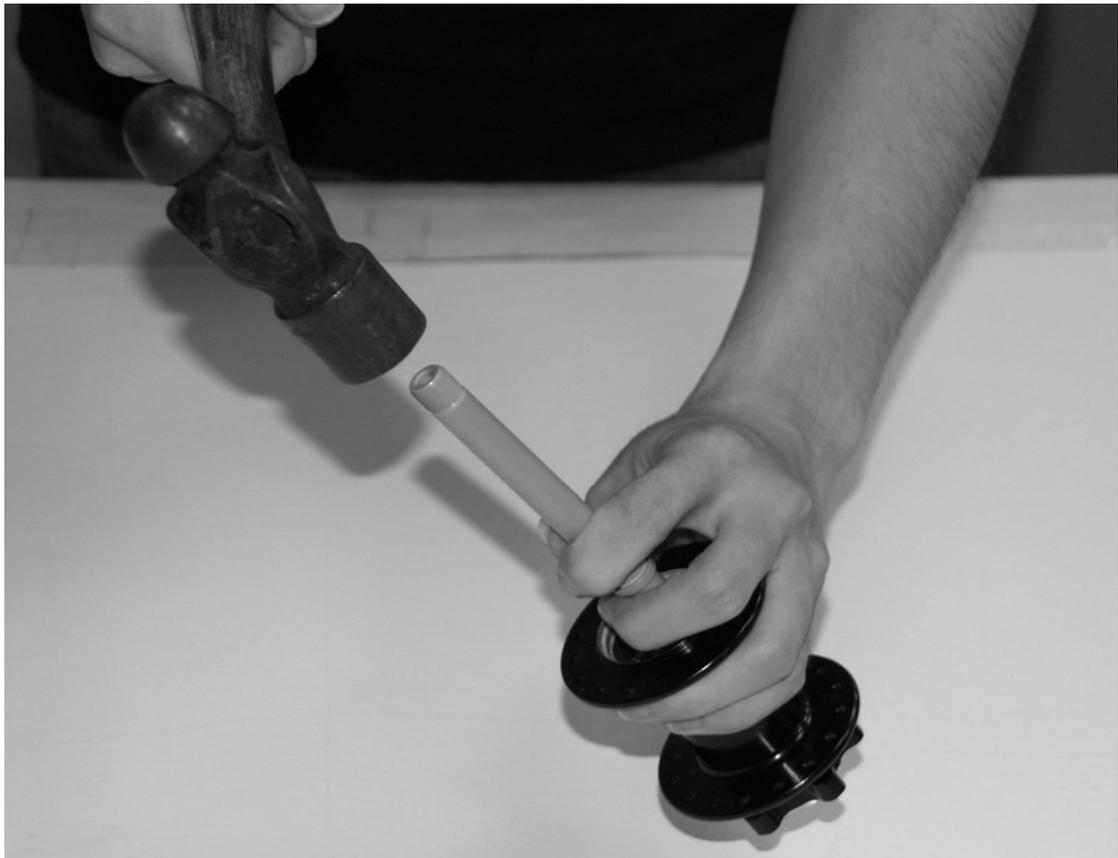


5. Put axle [or any tube] inside to the hub to tap up and change position around inside to push the farther sealed bearing out.



6. Use hammer to tap up the axle to Push farther sealed bearing out.



7. Take out the inner tube.

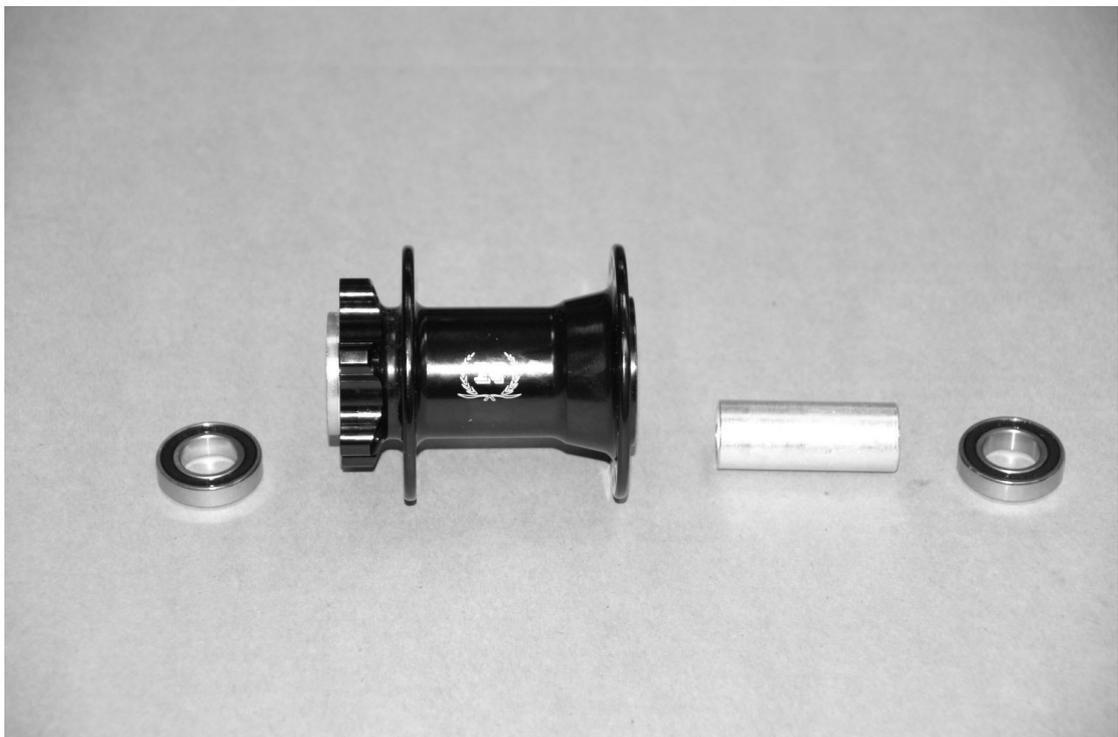

8. After disassemble the parts of hub.