




# DISASSEMBLING


## REAR F192GCC HUB ON WHEELS GR1950

Use similar procedure for other rear GCC hubs and wheels.




TOOLS

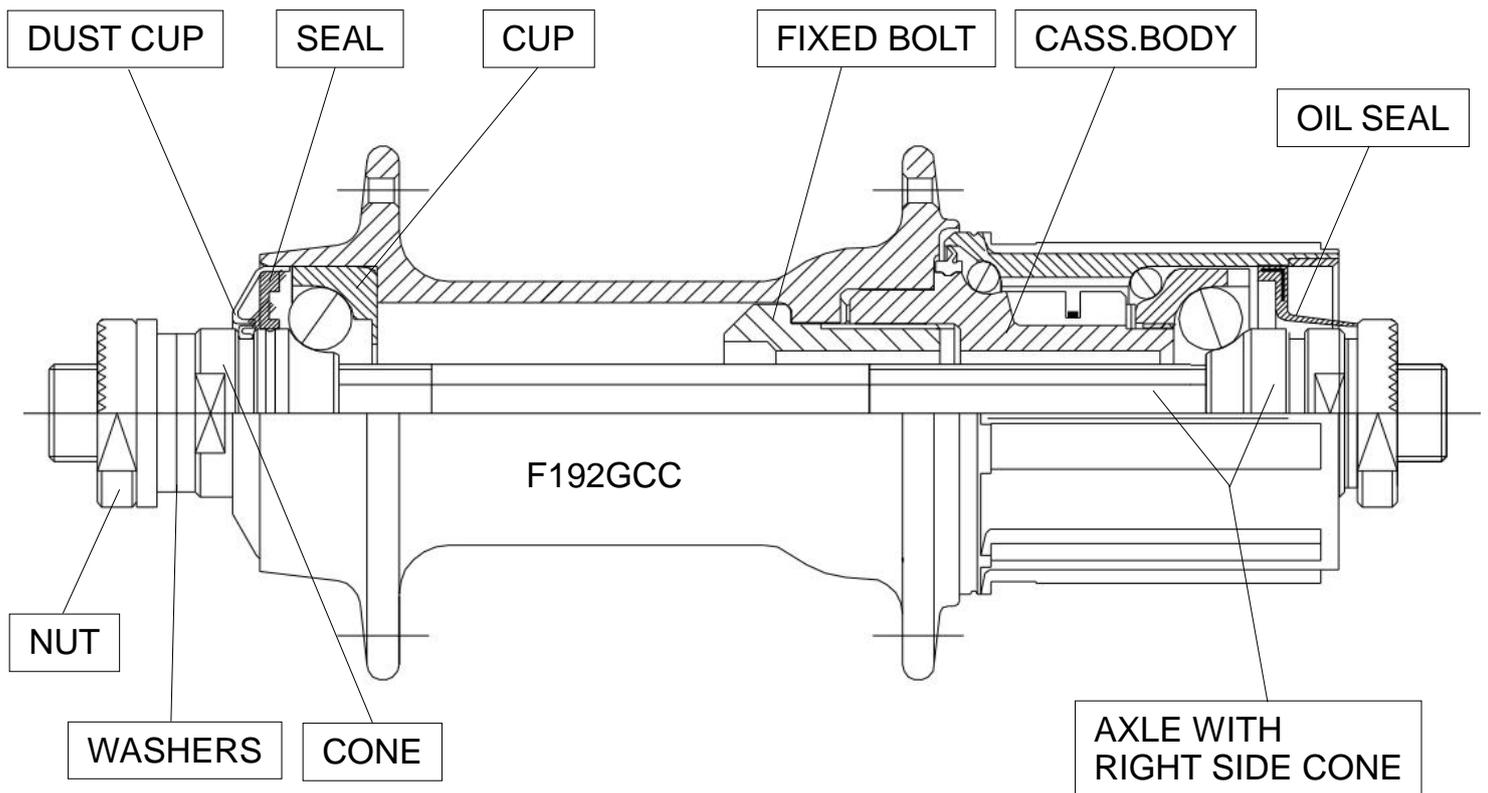


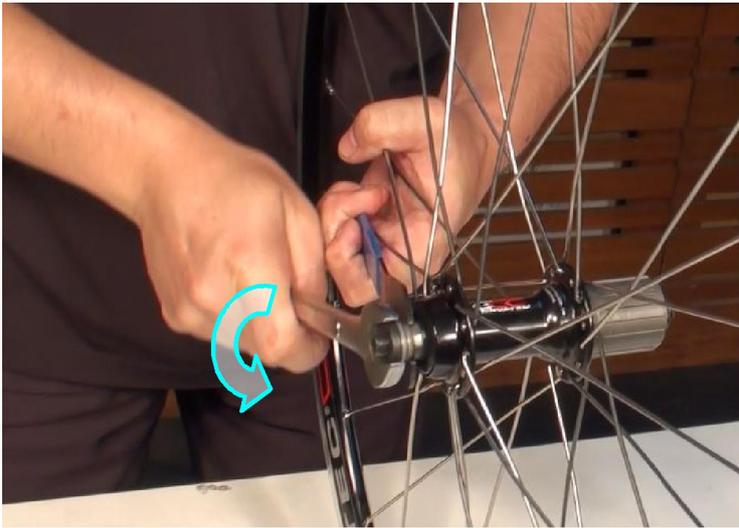

**Step 1**  
Loosen "Cone" & nut by wrench key  
15mm & 17mm.

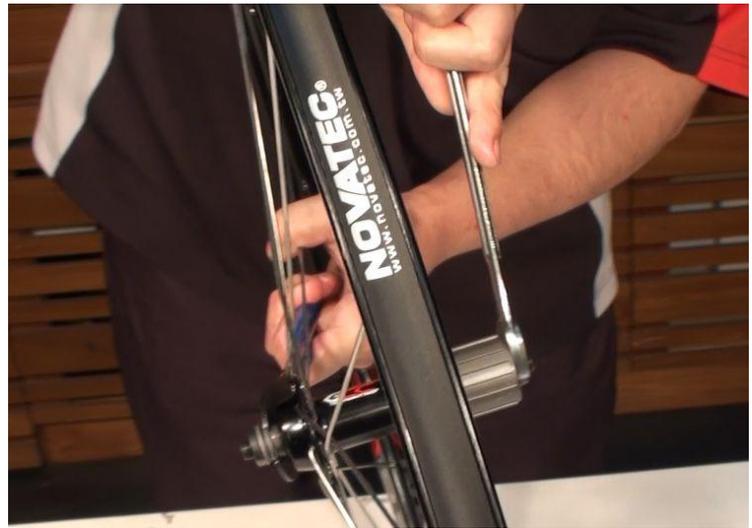


**Step 2**  
Loosen "Cone" & axle by wrench key  
15mm & 17mm.

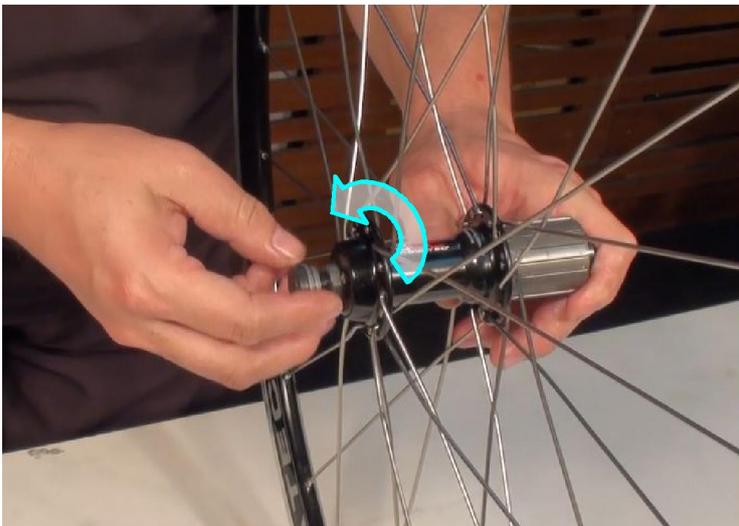

**Step 3**  
Screw out & remove nut and washers.



**Step 4**  
Screw out & remove cone.

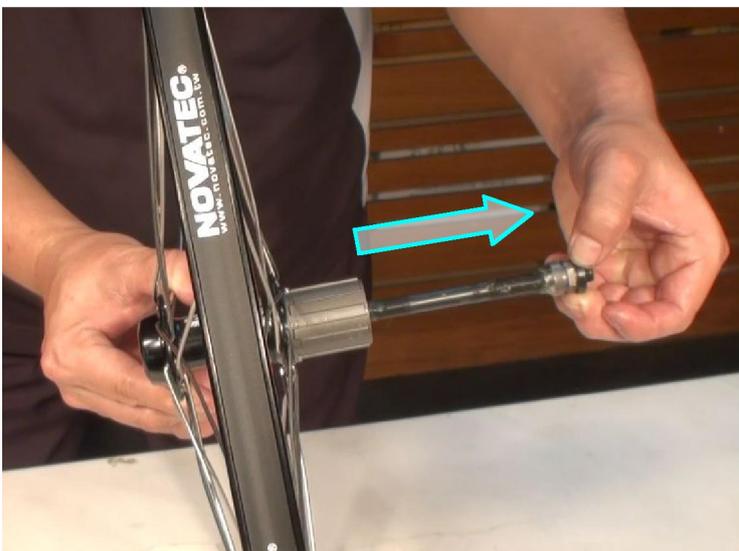

**Step 5**  
Remove axle.



**Step 6**  
Remove steel "Dust Cup".



**Step 7**  
Remove all ball from hub.



**Step 8**  
Remove seal from cassette body.



**Step 9**  
Remove all ball from cassette body.



**Step 10**  
Insert 12mm allen key into "Fixed Bolt" located inside hub shell.



**Step 11**  
Support the wheel on a stable surface & loosen the fixed bolt which secures the cassette body to the hub shell.



**Step 12**  
Screw out cassette body by turning wheel.